 


Ruko[®]

3+
for age

User Manual

v2.0 2021.08

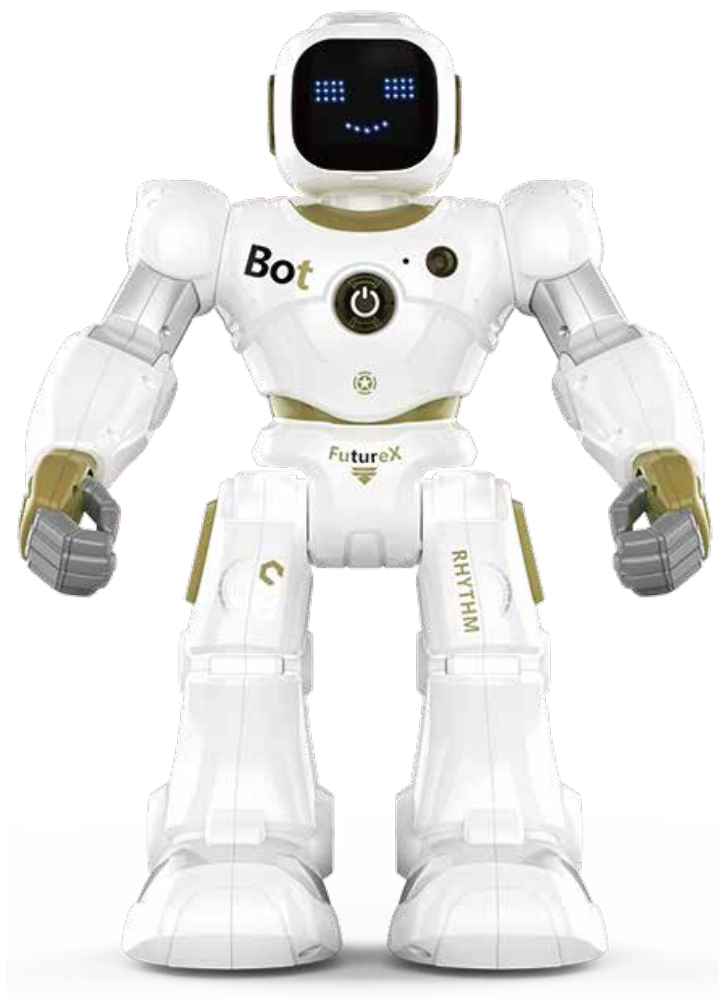


Carle

Contents

1 Package Contents	2
2 Cautions And Advices	3
2.1 Care And Maintenance	3
2.2 Special Notes To Adults	3
2.3 Battery Warning	3
2.4 Pay Attention To Safe Use	4
3 Battery Safety	5
3.1 Batteries Requirements (Transmitter)	5
3.2 Battery Guidelines	5
4 Charging Introductions	6
4.1 In The Transmitter	6
4.2 In The Robot	6
5 Remote Controls And Robot	7
6 Remote Control Function	9
6.1 Basic Function	9
7 Smart Dialogue	11
8 Play With the APP	12
8.1 Download	12
8.2 Basic Icons	12
8.3 Control	12
9 Common Issue&Solutions	16

 1 Package Contents

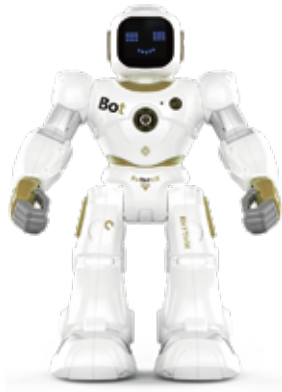

Robot X 1



Remote Control X 1
(Batteries not included)



USB Charging Wire X 1



User Manual × 1



Disclaimer and Safety Guidelines X 1



Quick Start Guide × 1

2 Cautions And Advices



The crossed-out dustbin symbol indicates that batteries, rechargeable batteries, button cells, battery packs, etc. must not be put in the household waste. Batteries are harmful to health and the environment. Please help to protect the environment from health risks. If the toy is out of use, please use a hammer to break the product to retrieve the battery operated toy or unscrew the battery door for replaceable battery operated toy, then take the battery out from the toy. Dispose of battery in accordance with your local battery recycling or disposal laws.



WEEE

When this appliance is out of use, please remove all batteries and dispose of them separately. Bring electrical appliances to the local collecting points for waste electrical and electronic equipment. Other components can be disposed of in domestic refuse.

2.1 Care And Maintenance

- Always remove batteries from the transmitter when it is not being used for a long period of time.
- To clean, wipe the toy gently with a clean cloth.
- Keep the toy away from direct heat.
- Do not submerge the toy into water, this can damage the electr.

2.2 Special Notes To Adults

- Before first use, read the user's information, and review with your child.
- This toy intended to be used in domestic areas (house and garden) only.
- Assembly should be performed under adult supervision changing batteries/ spare parts, trimming etc.)
- Parental guidance is recommended when installing or replacing batteries.
- Do not change or modify anything on the toy.

2.3 Battery Warnings

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed before being charged. (Transmitter only)

- Rechargeable batteries are only to be charged under adult supervision.
- Different types of batteries or new and used batteries are not to be mixed (Transmitter only).
- Only batteries of the same or equivalent type as recommended able to be used.
- Batteries are to be inserted with correct polarity.
- Exhausted batteries are to be removed from the toy and recycled (Transmitter only).
- The supply terminals are not to be short-circuited.
- Do not mix old and new batteries. (Transmitter only).
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries (Transmitter only).

2.4 Pay Attention To Safe Use

- Do not dispose the battery in fire or heat.
- Do not use or leave the battery near a heat source such as fire or heater.
- Do not strike or throw the battery against hard surface.
- Do not immerse the battery in water, and keep the battery in a cool dry environment.
- When recharging, only use the battery charger specifically for that purpose.
- Do not over-discharge the battery.
- Do not connect the battery to an electrical outlet.
- Do not directly solder the battery or pierce the battery with a nail or other sharp object.
- Do not transport or store the battery together with metal objects such as necklaces, hairpins etc.
- Do not disassemble or alter the battery.
- The battery inside the toy can't be replaced by the user.
- Charge the battery every 6 months.

 
 Notes:

The toy may malfunction under electrostatic discharge interference. If the toy does not respond, reset it. Use new alkaline batteries in this toy to obtain best performance. This toy must only be used with the recommended charger.

3 Battery Safety


3.1 Batteries Requirements (Transmitter)

- Power supply: ---
- Characteristics: DC 3V
- Quality and type: 2 x 1.5V "AA"/LR6 (not included)




3.2 Battery Guidelines

 - Precautions for charging: Use 5V/2A charging plugs. Fast charging plug exceeding 5V/2A are prohibited.

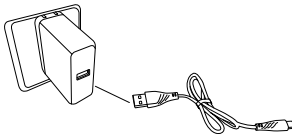

USB Adapter
(5V/2A)

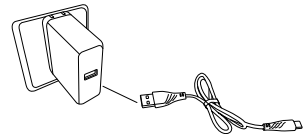 

USB Adapter
(>5V/2A)

- It is forbidden to overcharge the battery, please remove charging cable in time after fully charged to avoid damage due to overcharge.



USB Adapter
(5V/2A)

Original charging cable

 


Inferior charging cables

4 Charging Introductions


4.1 In The Transmitter

- Use a philips head screw to open the battery compartment lid of controller.
- Put 2X1.5V AA batteries inside the battery compartment.
- Put the lid back and use a screwdriver to tighten it.
- Switch on the on/off button on the back of the transmitter before using.

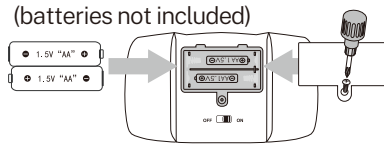


4.2 In The Robot


 
- Robot battery is located in the back of Robot to charge battery, please insert the robot battery is contained and is not replaceable the provided USB charging cable to the robot with any USB port of a powerbank, mobile charger, carcharger, or computer. Switch off the robot before charging. A light in the robot will be turned on during the charging process; when the robot is fully charged the light will turn off. The charging time is about 2 hours and the playing time is about 2 hours.

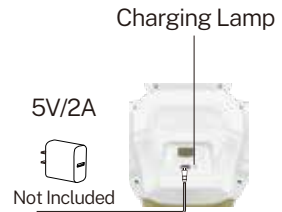

⚠ Use the charging cable correctly.

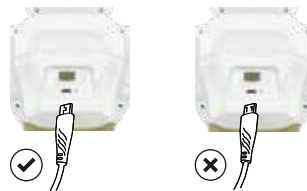 

5 Remote Controls And Robot

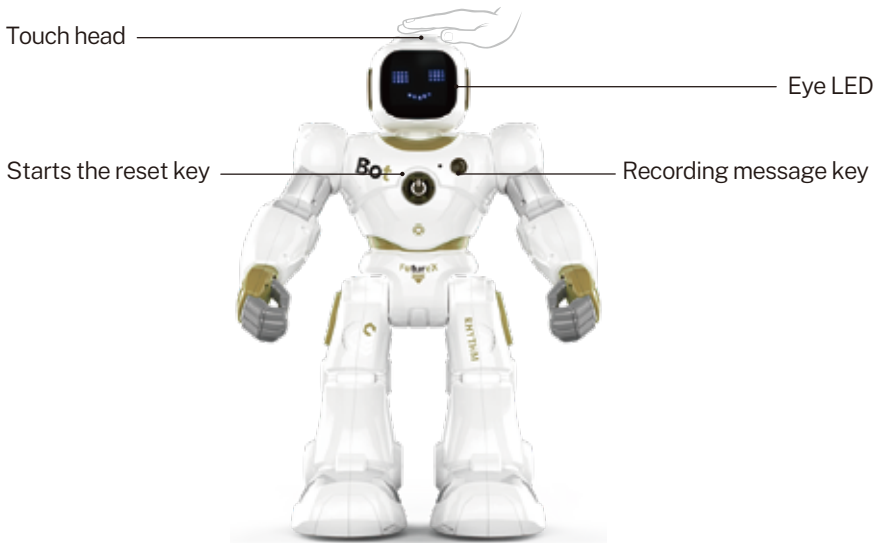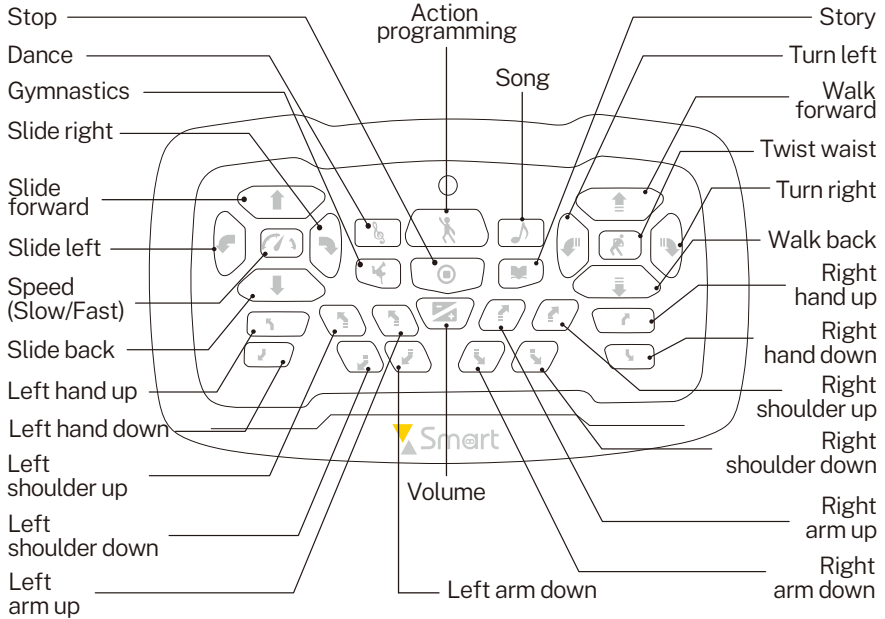  

- Turn ON/OFF

Switch on the ON/OFF button on the back of the robot to start the robot. The robot introduces himself while performing some movements and sounds.

⚠ The robot should remain on the floor.



- Standby

The Standby button wakes up the robot or to places it into Standby mode.



- Recording/Message

Long press the Recording button on the robot and the robot will start recording after "beep". You can record whatever you want to say, short press the Recording button to end the recording, 15 seconds are the maximum recording time. Press the Message button to play the message recorded.



- Touch Sensitive

When you touch the head of the robot, the robot will play for several sound effects for a total of five sounds effects.



 
 
- Bluetooth Playback

Open the Bluetooth settings and connect your phone to the device, "JT_Speaker". The robot will then function as a Bluetooth speaker.



6 Remote Control Function

6.1 Basic Function

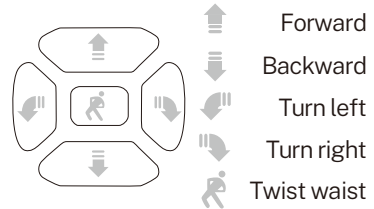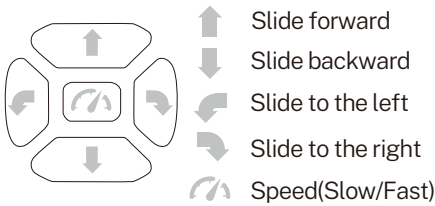

Left hand up



Left hand down



Left shoulder up



Left shoulder down



Left arm up



Left arm down



Turn volume down/up



Right hand up



Right hand down



Right shoulder up



Right shoulder down



Right arm up



Right arm down



Stop

- Music

Press the "music" button and the robot will perform a dance with music.



There are 8 dances in total.

- Gymnastics

By pressing the "Gymnastics" button, the robot move around while making sounds. There are two different gymnastics routines. To switch between them, press the "gymnastics" button again.



- Action Programming

Press the "Action programming" button until hear a "beep" sound. Up to 50 furinctions can be programmed. You can move forward/backward, turn left /right, twist waist, hand up/down, music, gymnastics, song, story. Press the "Action programming" button to perform programmed functions again. Programming is not enough for 50 functions, wait for 5 seconds or press the "Actions programming" button to enter directly.



⚠ Three buttons in the middle of the remote control are not included in the programming operation.

 
- Song

Press the "song" button and the robot will sing a song while moving.




- Story


Press the "story" button, the robot tells a story, there are four stories in all.

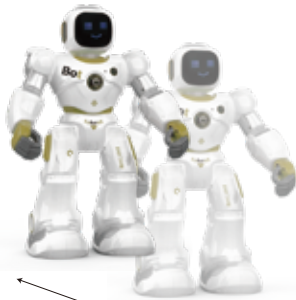


Walk or glide backward

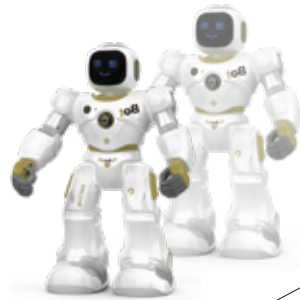 

Walk or glide forward

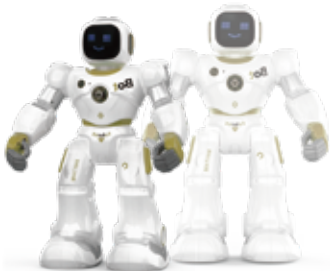 

Turn left

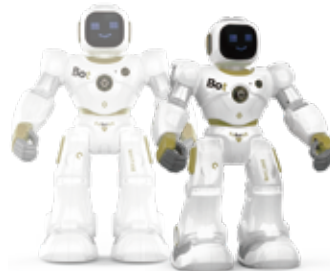 

Turn right



7 Smart Dialogue

- When the robot is in standby mode, the Voice Dialogue function will be turned on automatically. (Voice commands are available only in standby mode.) The robot will automatically respond to the following commands.

VOICE COMMAND	ROBOT RESPONSE
1.Hello	Hello guys+Left hand up
	Mikalila+Spread out its arms
	You are so cute+Turn around
2.You are so cool!	Makesilo+Twist waist
	Haha, the same to you+turn around
	Thank you+turn around
3.Where are you from	It' s a secret+walking
	Venus Pologulu+walking
	A distant Planet+walking
4.I love you	Abubabu, lalalala-
	I love you, too
	Abubu
5.Let' s do sports!	OK
	Abubabu, lalalala+do sports with music
	Come on!
6.Go forward	Walk forward
	Yes, sir+Slide forward
7.Go backward	Walk backward
	Yes, sir+Slide backward
8.Turn left	Slide to the left
	Got it+Turn left
9.Turn right	Slide to the right
	Got it+Turn right
10.Twist your waist	Twist waist with music 1
	Twist waist with music 2
11.Move your shoulders	Moving shoulders
	Moving shoulders
12.Sing a song	No problem+song 1
	Aha, It' s show time+song 2
	Bulubabulagu+song 3
13.Dance for me	Great! Here we go!+dance 1
	Music+dance 2
	Hah, good idea+dance 3
14.Goodbye	Bye-bye+Go into sleep mode
	OK, see you+Go into sleep mode
	Salala+Go into sleep mode
	Hu~~+Go into sleep mode

8 Play With The APP

8.1 Download

- Scan the applicable QR code for your operating system, download and install the application.

⚠ APP is compatible from Android 4.3 or IOS 8.0 and up.



8.2 Basic Icons

- SETTING

Open Carle APP, click the Settings button at the top right of the screen to select the languages.

- CONNECT

 
Turn on Bluetooth in your mobile phone then switch on the robot. Click CONNECT and connect a Bluetooth device named "JT_XXXX". Bluetooth Playback cannot be used when this Bluetooth is connected.

- LAUNCH

Click LAUNCH, there has three modes: CONTROL, PROGRAM and CONTENT, you can use your mobile phone as if were a controller.

- HELP

Below you may find a quick guide for the main functions.

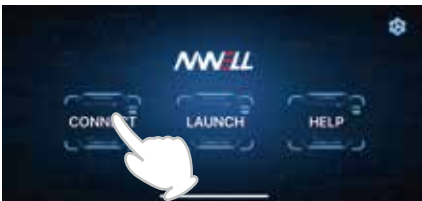

8.3 Control

- G-Sensor Mode

You can steer the robot by tilting the device in the desired direction. On both sides of the sliding direction as shown in the robot, the robot will make the corresponding action.



Action reset

 


Switching action
Forward, Backward,
Turn right, Turn left



Shrug

• Hand-Control Mode

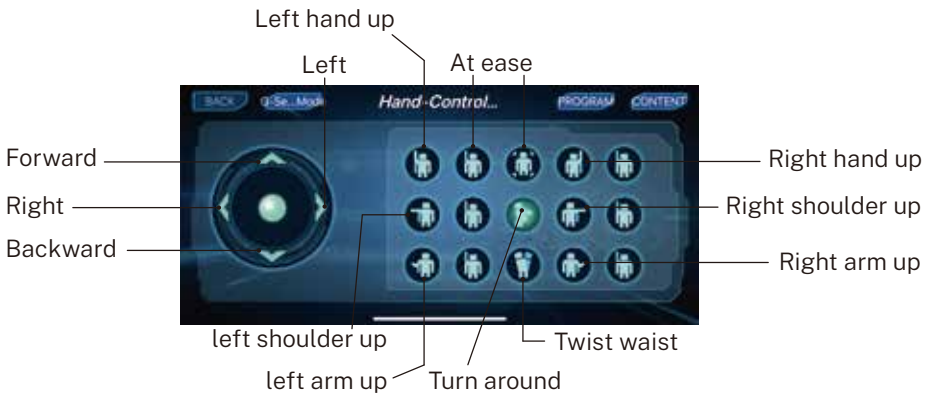

• PROGRAM

There are 58 actions to choose from. When you choose the actions in blue background, the robot will perform them one by one; When you choose the actions in red background, the robot will perform them at the same time. Click one of the selected actions on the right, and then select the new actions to insert on the left.



- By pressing a selected action on the right for a few seconds, you can delete the actions you don't need.



Left or right switch action programming: Left hand, Right hand, Move, Expression, Music.



Click this option to preview the selected actions in the lower right corner.



Click this option to save the selected actions in memory.



Click this option to select or delete the saved program.



Click this option to perform actions.

• CONTENT

 
GYMNASTICS: There are two different gymnastics.

STORY: There are 4 different stories in total.

VOLUME: There are three levels of volume.

DANCE MUSIC: There are 8 different dances.

MUSIC: There are 10 different music.

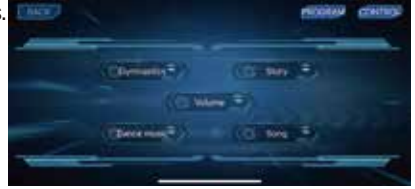

Safety Precautions With Batteries

- 1.The battery cannot be removed or replaced.
- 2.It is recommended to use a 5V 2A rated charger, or it may shorten the lifespan of the batteries
- 3.Please regularly check the charger wire, plug, shell and other parts to see if these parts are damaged. When the damage is found, please stop using it.
- 4.Avoid short circuit and do not disassemble or throw the battery into fire.
- 5.This product contains electronic components, please do not place it near humid, high temperature environment and flammable objects.
- 6.The exhausted battery should be taken out of the toy
- 7.When not using the machine for a long time, please turn off the power switch after the battery is fully charged

Tips

- 1.This product is not suitable for children under 3 years old.
- 2.The battery must be charged under adult supervision.
- 3.All pictures shown are for illustration purpose only. Actual product may vary due to product enhancement.

- UK** • 1088 robot: 3.7V 600Mah lipo battery (included); Controller: AA * 2 battery (not included)
 • Please do not use products of the same frequency band at close range at the same time to avoid radio signals from interfering with each other and causing loss of control
- FR** • Robot 1088: batterie lipo 3.7V 600Mah (incluse); Contrôleur: pile AA * 2 (non incluse)
 • Veuillez ne pas utiliser de produits de la même bande de fréquences à courte portée en même temps pour éviter que les signaux radio n'interfèrent les uns avec les autres et ne provoquent une perte de contrôle
- ES**: • 1088 robot: batería lipo de 3.7 V 600 Mah (incluida); Controlador: batería AA * 2 (no incluida)
 • No utilice productos de la misma banda de frecuencia a corta distancia al mismo tiempo para evitar que las señales de radio interfieran entre sí y provoquen la pérdida de control.
- DE**: • 1088 Roboter: 3.7 V 600 mAh Lipobatterie (im Lieferumfang enthalten); Controller: AA * 2 Batterie (nicht im Lieferumfang enthalten)
 • Bitte verwenden Sie Produkte desselben Frequenzbandes nicht gleichzeitig im Nahbereich, um zu vermeiden, dass Funksignale sich gegenseitig stören und die Kontrolle verlieren.
- IT**: • Robot 1088: batteria lipo 3.7V 600Mah (inclusa); Controller: batteria AA * 2 (non inclusa)
 • Si prega di non utilizzare prodotti della stessa banda di frequenza a distanza ravvicinata allo stesso tempo per evitare che segnali radio interferiscano fra loro e causino la perdita di controllo

Manufacturer Name: Guangdong Amwell Toys Industry Co., Ltd

Manufacturer Address: Xingda Industrial Park, Fengxiang, Chenghai, Shantou City, Guangdong Province, China

EC/REP	UK/REP
Name: Sea&Mew Consulting GmbH	Name: Sea&Mew Accounting Ltd
Address: Mittenhuber Straße 4, 92318 Neumarkt	Address: Electric Avenue Vision 25, London, EN3 7GD



NO. 1088
MADE IN CHINA




9 Common Issue & Solutions

Problem cause	Solution
Remote control cannot control the robot	<ol style="list-style-type: none"> 1.Check if the remote control has power 2.Can not be used under strong light 3.Need to aim at the robot head to control 4.Only be controlled at a distance of 3-5meters without any obstructions
Automatic shutdown sleep	<ol style="list-style-type: none"> 1.Robot will be reminded if the battery is low, please charge it in time 2.Robot will automatically sleep if it hasn't been operated for a long time
Can not charge	Use the correct data cable and charger
Voice can not be recognized	<ol style="list-style-type: none"> 1.Voice commands that did not follow the instructions 2.Voice pronunciation is not standard or speaking speed is too fast 3.The robot is running (need to stop to recognize voice commands) 4.Noisy environment
Wheel unable to walk	<ol style="list-style-type: none"> 1.Whether there is any foreign matter (hair, dust, etc.) on the bottom of the wheel 2.Whether it can be turned, check whether the gear is faulty
Can not connect to APP	<ol style="list-style-type: none"> 1.Bluetooth is not turned on, APP is Bluetooth connection, *not WiFi 2.Whether it is connected to the wrong Bluetooth, one is a Bluetooth Playback (named "JT_Speaker"), and the other is a Bluetooth APP (named "JT_xxxx") control 3.Need to wake up and connect app again
Can not recording	<ol style="list-style-type: none"> 1.Did not hold down the record button 2.Did not follow the playback instructions
*Do not play with robots in high places (tables, sofas, beds, uneven places, etc.)	

Ruko®

www.rukotoy.com

If you have any questions about this product, please contact Ruko by sending a message to Rukofunnytoys@gmail.com  +86 19925221959 (Available from 6 pm to 3 am PST)